



**Technical Information** - The key dimensions are shown below as well as the seating options. Please refer to the Chrysler Voyager brochure for the full specification of the base vehicle including engines, transmissions and colours. Please refer to the sdl Entervan price list for prices of the complete vehicle and options. Driving and passenger adaptations can be assessed and quoted for on an individual basis. This assessment can be carried out at your home or at our Hemel Hempstead factory.

<b>A</b>	Overall width of vehicle with ramp deployed	3012mm	<b>G</b>	Ground clearance (at lowest point)	130mm
<b>B</b>	Overall width of vehicle with ramp stowed	1997mm	<b>H</b>	Length of ramp when deployed	1190mm
<b>C</b>	Width of boot aperture	1260mm	<b>I</b>	Overall length of vehicle	5096mm
<b>D</b>	Internal height – lowered floor area	1470mm	<b>J</b>	Usable width of ramp passenger's side	695mm
<b>E</b>	Height of vehicle with tailgate open	2130mm	<b>J</b>	Usable width of ramp driver's side	745mm
<b>F</b>	Height of vehicle including roof bars	1850mm	<b>J</b>	Width of door opening passenger's side	740mm
<b>F</b>	Height of vehicle excluding roof bars	1795mm	<b>J</b>	Width of door opening driver's side	790mm

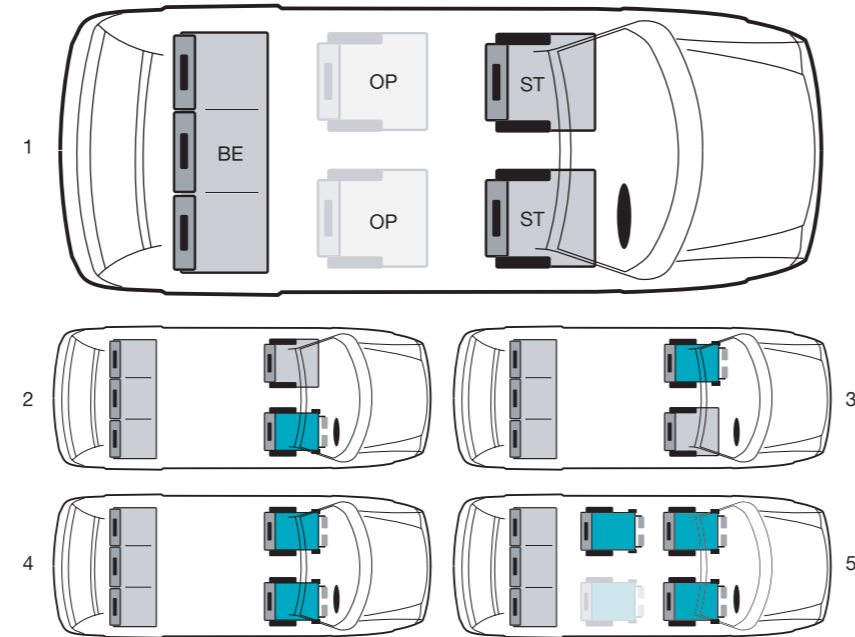

Wheelchair Accessible Vehicle

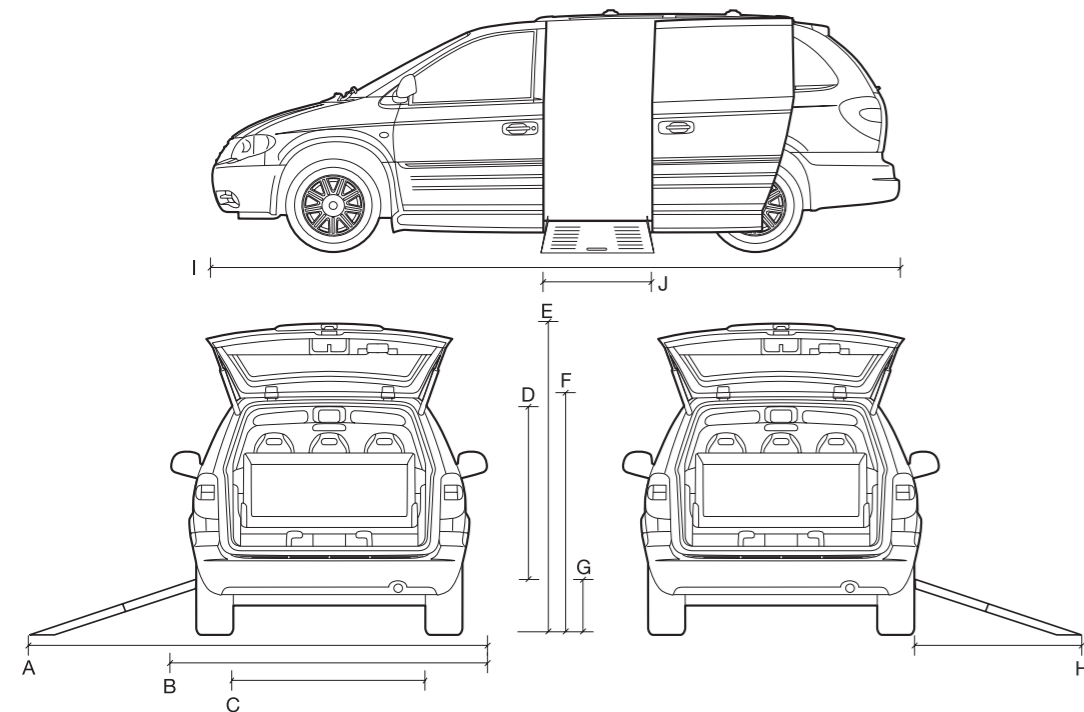

**Seat Configuration** - It is also possible for the driver's seat to be interchangeable with the front passenger seat.

**BE** - Rear bench seat - three seats with headrests and lap & diagonal seat belts. **OP** - Two middle seats - fixings in floor can be supplied as an option. **ST** - Standard Chrysler front seats on quick release bases

ADL/SOM/06\_04

<b>1</b>	Seat descriptions (see left)
<b>2</b>	Wheelchair driver
<b>3</b>	Wheelchair front passenger
<b>4</b>	Wheelchair driver and front passenger
<b>5</b>	As four plus wheelchair passenger in middle, either side

**Braun Entervan** - Chrysler Grand Voyager

[www.steeringdevelopments.co.uk](http://www.steeringdevelopments.co.uk)



The freedom to take control

# ENTERVAN

**The Chrysler Entervan by sdl** - The Chrysler Voyager Entervan by sdl is manufactured in Germany for the European market. It offers luxury car refinement with wheelchair accessibility. This vehicle is a Chrysler Grand Voyager with a lowered floor from the rear seats to the front bulkhead, power operated door and ramp.

It offers more internal headroom than most other wheelchair accessible vehicles. It therefore caters for tall wheelchair users better than most alternatives. There is also the possibility to travel in a wheelchair in either the front passenger position, middle of the vehicle or of course the driver's position.

We can also fit an electric or manual swivel seat at either front position for people who can transfer once inside the vehicle. This means you always transfer in the dry. Both front seats can be removed quickly and easily on their quick release bases which have wheels for easy manoeuvrability.

Steering Developments Ltd (sdl) is the importer for the UK and is able to bring this vehicle to your home for demonstration. The vehicle and conversion are exempt from VAT when supplied to a wheelchair user.

**Mobility made easy, safe and comfortable** - As well as the refinement and flexibility offered by the Entervan it is also approved by TUV to meet European standards of safety and quality.

The Entervan comes as standard with manual tie-down webbing straps for two middle positions and both front positions.

sdl also offers automatic powered wheelchair clamping as an option. sdl also, as UK's leading conversion company, offer a full range of driving and passenger adaptations.

**More information** - For further information about the Entervan, or any other products, please contact **sdl** at:


Steering Developments Limited | Unit 5 Eastman Way | Hemel Hempstead | Hertfordshire | HP2 7HF

T 01442 212918 F 01442 240254 E enquiries@steeringdevelopments.co.uk

W www.steeringdevelopments.co.uk



**1** - A crash tested powered wheelchair (sdl Lifestyle) shown in the front passenger position – see back page for all seating options. **2** - The side door opens, the rear suspension kneels and the ramp deploys with one touch of the original Chrysler remote key fob. The ramp can be fitted to the left or right sliding door. **3** - DVD and drop down roof TV screen for middle and rear passengers. This is standard on the top of the range model and can be fitted as an option on the other models. **4** - Satellite Navigation is particularly useful when driving with hand controls. This is standard on the top of the range model and can be fitted as an option on the others. **5** - The sdl Lifestyle wheelchair shown in the front driver's position.

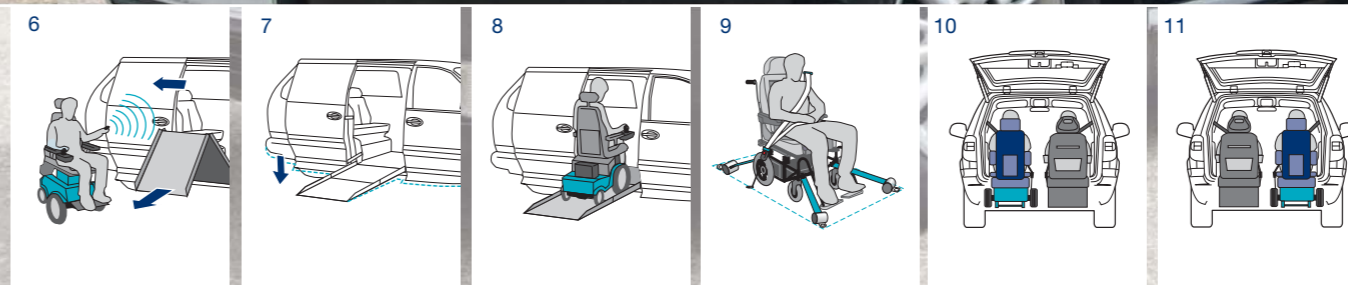

**6 & 7** - Operation of the door, ramp and suspension by the original Chrysler remote key fob. With the suspension lowered, the angle of the ramp can easily be negotiated by a manual wheelchair. **8** - Entering the vehicle via the ramp. The ramp can be fitted to the left or right of the vehicle. **9** - A wheelchair shown secured by manual webbing system. **10** - A wheelchair passenger can travel in the front next to the driver, no more shouting from the back of the vehicle. **11** - The vehicle can be driven from the wheelchair.